

MORE THAN SENSORS



Part number: FTQ000116 - Model: FTQSP-CAR H

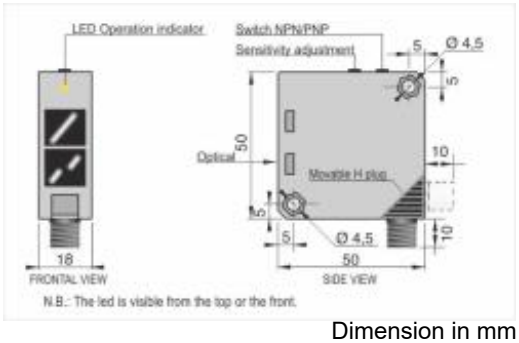


Dimension in mm

TECHNICAL CHARACTERISTICS

Power supply:		Direct current
Working voltage:		10 - 30 Vdc
Switching distance (cm):		0 - 500 (adjustable)
Output type:		DC PNP/NPN
Function:		NO+NC
Actuation type:		Instantaneus
Light source:		Red
Power on delay:		< 100 mSec
Max switching frequency:		400 Hz
Max output current:		200 mA
Absorption:		< 35 mA @ 24 Vdc
Voltage drop:		< 1.8 V
Short circuit protection:		Present
Interference from external light:		> 10000 Lux
Led indicator:		Yellow = operation
Temperature limits:		-20 - +60 ¡C
IP rating:		Depending on connector
Housing material:		Grey ABS
Mechanical characteristics:		FTQ 50x50x18
Connection type:		H plug
Weight:		50 g

AECO S.r.l. 20065 Inzago (MI) Italy - Via G. Leopardi, 5 - Tel. +39 02 954381 - Fax +39 02 9548528
http://www.aecosensors.com - e-mail: aeco@aecosensors.com


MORE THAN SENSORS




Part number: FTQ000116 - Model: FTQSP-CAR H

WIRING DIAGRAM

CONNECTION WITH H PLUG

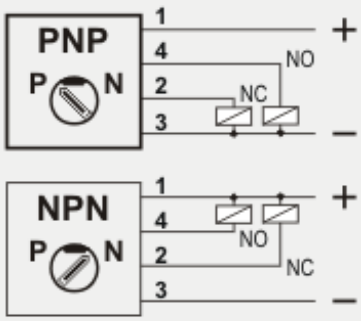

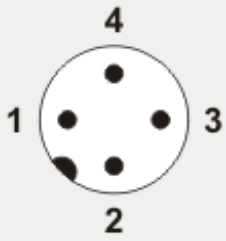


VIEW OF MALE CONNECTOR

1 = Brown / +
3 = Blue / -
4 = Black / output NO
2 = White / output NC

INSTRUCTIONS FOR CORRECT INSTALLATION


TYPES

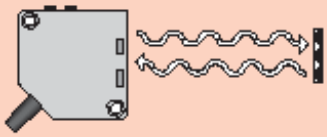

Polar. reflection
with reflector
(AR type)

INSTRUCTIONS FOR THE PROGRAMMING AND ADJUSTMENT

FTQ MODELS
(NPN/PNP)

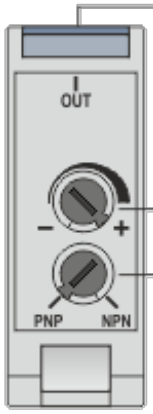


YELLOW LED - OPERATION INDICATOR : This led is ON when the object to be detected enters the sensing range of the photocell giving output signals.

TRIMMER FOR THE SENSING RANGE ADJUSTMENT : The photocell is supplied with max. sensing range with the trimmer totally rotated in the clockwise direction. The sensitivity reduces by rotating the trimmer in the anti-clockwise direction.

SWITCH NPN/PNP :
The device is delivered in PNP mode.
Setting NPN mode :
Power on the device and put the switch in PNP mode, if it is not already in this position.
Power off the device. Put the switch in NPN mode.
Power on the device again and check the NPN output mode.
Setting PNP mode :
Power on the device and put the switch in NPN mode, if it is not already in this position.
Power off the device. Put the switch in PNP mode.
Power on the device again and check the PNP output mode.

AECO S.r.l. 20065 Inzago (MI) Italy - Via G. Leopardi, 5 - Tel. +39 02 954381 - Fax +39 02 9548528
http://www.aecosensors.com - e-mail: aeco@aecosensors.com


H PLUG - M12 CONNECTOR

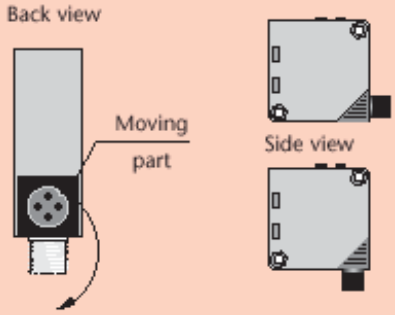

Turn in the clockwise to choose the direction of the connector exit.

CHARACTERISTIC CURVES OF FT18M - FT18 - FT18EL - FTQ TYPES

FTQ-CAR / FTQ AR-R

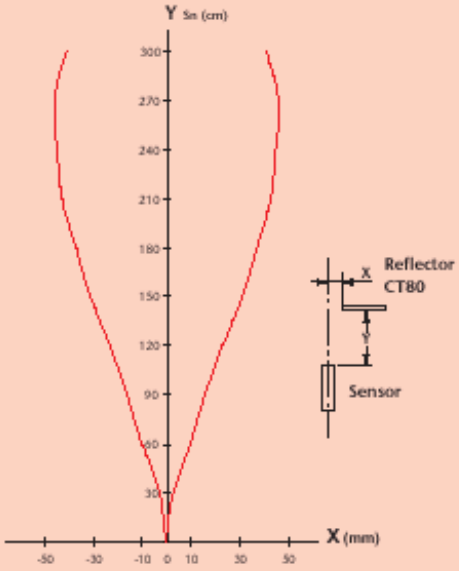

AECO S.r.l. 20065 Inzago (MI) Italy - Via G. Leopardi, 5 - Tel. +39 02 954381 - Fax +39 02 9548528
http://www.aecosensors.com - e-mail: aeco@aecosensors.com